



P77.37-2218-07

- 2 Filler plug
- 3 Oil reservoir

A7/5 RVC [UVS] hydraulic unit

A Oil level

⚠ Danger!	Risk of injury to skin or eyes caused by hydraulic fluid spraying out under high pressure. Risk of poisoning caused by swallowing hydraulic fluid.	Depressurize the hydraulic system completely before starting any work on the system. Wear protective clothing and safety glasses.	AS00.00-Z-0013-01A
1	Open and close Vario roof with Vario roof switch	i The hydraulic system can be bled by opening and closing. Keep Vario roof completely closed after bleeding.	
2	Open trunk lid		
3	Remove spare tire cover from trunk		
4	Check oil level (A) on oil reservoir (3) of the RVC [UVS] hydraulic unit (A7/5)	i Vario roof is closed and trunk lid open.	
5	Loosen RVC [UVS] hydraulic unit (A7/5) until oil filler screw (2) is accessible so that hydraulic oil can be refilled.	i Do not disconnect electrical and hydraulic lines.	AR77.37-P-3500R
6	Correct oil level (A) on oil reservoir (3) of the RVC [UVS] hydraulic unit (A7/5)	⚠ Use only "Aral Vitamol ZH-M" hydraulic oil. When using other hydraulic oil, the hydraulic system of the Vario roof can be damaged. Nm ⚠	AR77.37-P-3501-01RA *BA77.37-P-1005-01A *BF77.37-P-1001-01A
7	Install RVC hydraulic unit (A7/5)		AR77.37-P-3500R
8	Lay spare tire cover into trunk and close trunk lid.		

Nm Hydraulic convertible top

Number	Designation	Model 230 as of vehicle ident. no. 112117
BA77.37-P-1005-01A	Filler screw on hydraulic unit	Nm 1.0

Soft top hydraulic system

Number	Designation	Model 230 as of vehicle ident. no. 112117
BF77.37-P-1001-01A	Filling capacity Soft top hydraulic system oil reservoir	Liters 0.18

