

P77.37-2069-09

1 Oil level marking

A7/5 RVC [UVS] hydraulic unit

A Oil level


⚠ Danger!	Risk of injury to skin or eyes caused by hydraulic fluid spraying out under high pressure. Risk of poisoning caused by swallowing hydraulic fluid.	Depressurize the hydraulic system completely before starting any work on the system. Wear protective clothing and safety glasses.	AS00.00-Z-0013-01A
1	Open and close Vario roof with Vario roof switch	i The hydraulic system can be bled by opening and closing. Keep Vario roof closed after bleeding.	
2	Open trunk lid		
3	Remove spare tire cover from trunk		
4	Check oil level (A) on oil reservoir of the RVC [UVS] hydraulic unit (A7/5)	i Vario roof is closed and trunk lid open. The oil level (A) must be between the two oil level markings (1).	
5	Correct oil level (A) on oil reservoir on the RVC [UVS] hydraulic unit (A7/5)	Nm ⚙ ⚙	AR77.37-P-3501-01R *BA77.37-P-1005-01A *BF77.37-P-1001-01A *230589016300
6	Lay spare tire cover into trunk and close trunk lid.		

Nm Hydraulic convertible top

Number	Designation	Model
		230 up to vehicle ident. no. 112116
BA77.37-P-1005-01A	Filler screw on hydraulic unit	Nm 8.0

Soft top hydraulic system

Number	Designation			Model 230 up to vehicle ident. no.112116
BF77.37-P-1001-01A	Filling capacity	Soft top hydraulic system oil reservoir	Liters	0.132
		Specifications for Operating Fluids	Sheet	BB00.40-P-0343-00A

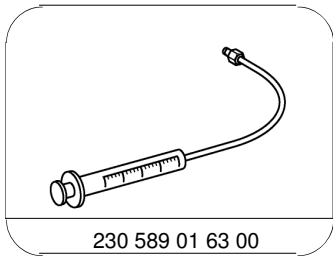

Filler syringe