


MODEL 215, 220

Illustrated on model 220

- 1 Foam block
 2 Pneumatic strip
 3 Pneumatic strip
 4 Electrical connector
 A37 PSE control module (combined)

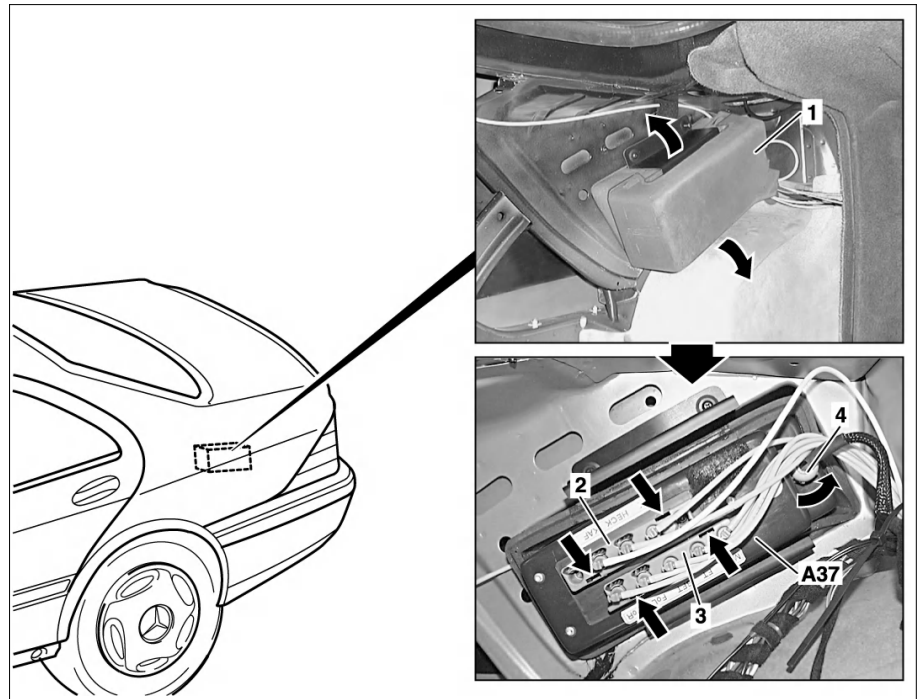

P80.20-2001-06

☒ ☒	Removal, installation		
1	Remove paneling in trunk	i except right side paneling and rear wall paneling	AR68.30-P-4600M
2	Press apart plastic lugs (arrows) and remove foam cap (1)		
3	Unclip pneumatic strips (2, 3) on pneumatic control module with PSE control module (combined) (A37)	i Clips are located in the oblong holes marked with arrows. Unclip with flat tool, e.g. screwdriver	
4	Loosen electrical connector (4) on PSE control module (combined) (A37) and remove lead	i Turn in direction of arrow	
5	Remove PSE control module (combined) (A37)		
6	Install in opposite order	i If the PSE is replaced version coding must be accomplished via STAR DIAGNOSIS	
7	Check central locking, lumbar support or multicontour backrest, power locking, head restraint extension and retraction for proper function		