


Troubleshooting

TH220B, TH330B, TH340B, TH350B, TH355B, TH360B, TH460B, TH560B and TH580B Telehandlers

Using the Operator Monitor to Determine Diagnostic Codes

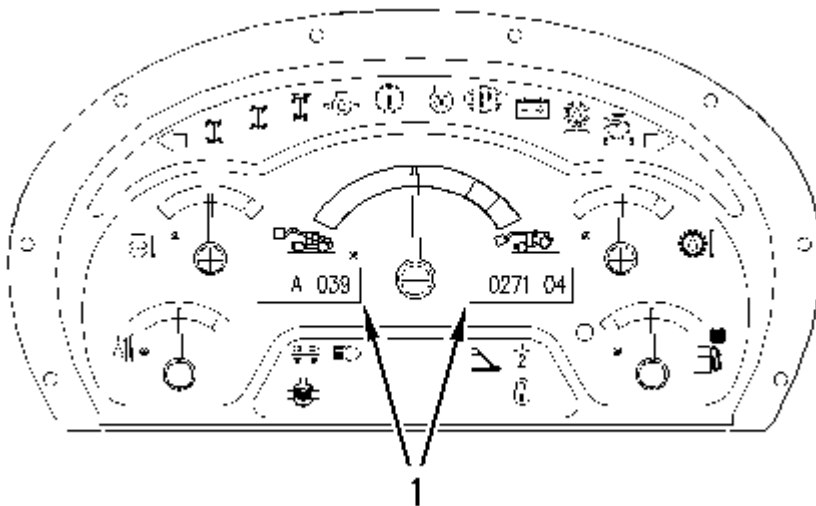

Instrument panel showing an active diagnostic code (1)

Diagnostic codes can be displayed on the instrument panel. The codes can be viewed when the panel is in the service mode. To enter the service mode, begin with the key switch in the OFF position. Cycle the key switch three times within ten seconds. Then, leave the key in the ON position. The displays are used to show active diagnostic codes and logged diagnostic codes. The MID is shown on the left display. The CID and the FMI are shown on the right display. When a diagnostic code is

active, the letter "A" is shown in the left display. When a diagnostic code is inactive, only the code is shown. Each code is shown for several seconds. Then, the display will show the next code. After all the codes are shown, "---" will appear. The display will then cycle through all the codes again. To exit the service mode, turn the key to the OFF position for five seconds.
