


⚠ WARNING

Before using the dishwasher, read carefully and follow the safety instructions in the Use and Care Manual.

📄 Notice

Read the Use and Care Manual prior to operating the dishwasher for the first time.

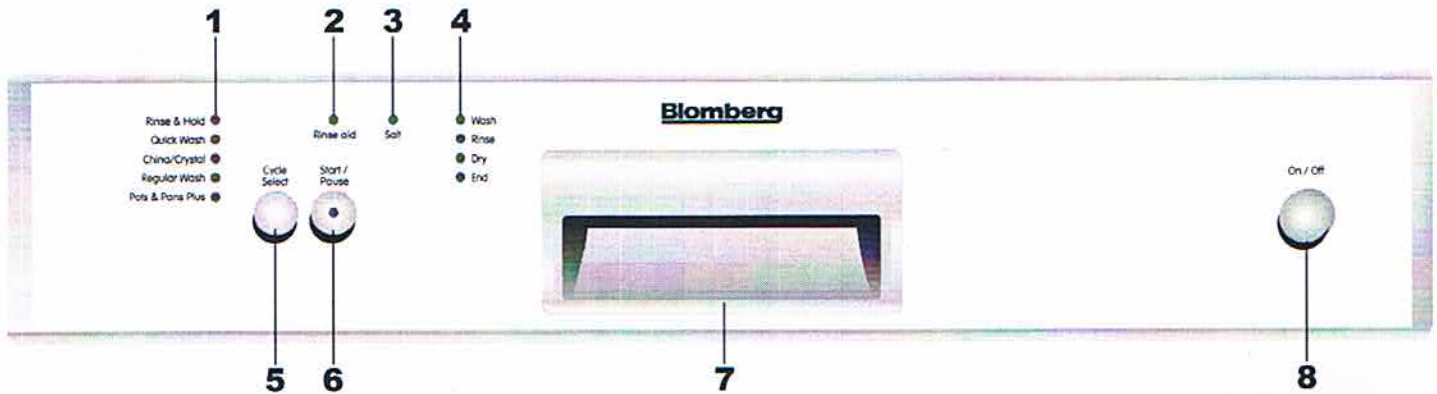

- 1** Program lights
- 2** Rinse aid level indicator light *
- 3** Salt level indicator light *
- 4** Program follow up lights
- 5** Cycle Select button
- 6** Start/Pause button
- 7** Door handle
- 8** On/Off button

* Depending on model

How to use your dishwasher:

1. Open the door by pulling the door handle. **7**
2. Load the dishwasher.
3. Check that both upper and lower spray arms move freely.
4. Pour correct amount of detergent into the detergent dispenser and close the lid.
5. Use the On/Off button **8** to turn the dishwasher on.
6. Check the rinse aid level indicator light. **2** If necessary, refill rinse aid.
7. Check the salt level indicator light. **3** If necessary, refill salt. (depending on model)
8. Use the Cycle Select button **5** to choose your washing program.
9. Start the program with the Start/Pause button. **6**

10. When the progress indicator light "End" lights up **4**, the wash cycle is completed. Use the On/Off button **8**. to turn the dishwasher off.
11. Allow your dishes to cool for 20 minutes, with the door open.
12. Unload the dishes. Begin with the lower rack.

⚠ CAUTION

Avoid opening the door during the washing process. This interrupts the washing process, and hot steam will escape. This may cause burns and other injuries. When the door is closed, the program will continue.

PROGRAM TABLE

Program number	1	2	3	4 Reference *	5	
Program name	Rinse & Hold	Quick Wash	China/Crystal	Regular Wash	Pots & Pans Plus	
Temperatures (Wash Rinse)	(°F)	Water Heater Temperature	113 - 131	122 - 149	131 - 155	158 - 163
	(°C)		45 - 55	50 - 65	55 - 68	70 - 73
Degree of dirtiness	-	Few	Few	Medium	High	
Detergent in dispenser section						
15 ml	-	+	-	-	-	
15-25 ml	-	-	+	+	+	
+ 5 ml	-	-	-	+	+	
Recommended detergent amount						
Hard water	ml	-	15-25	25	25-40	40
	tsp	-	3-5	5	5-8	8
Medium water	ml	-	15	15-25	25	40
	tsp	-	3	3-5	5	8
Soft water	ml	-	15	15	15-25	25-40
	tsp	-	3	3	3-5	5-8
Program process	Wash ▼ End	Main wash ▼ Rinse ▼ Final rinse ▼ End	Main wash ▼ Rinse ▼ Final rinse ▼ Dry ▼ End	Wash ▼ Main wash ▼ Rinse 1 ▼ Rinse 2 ▼ Final Rinse ▼ Dry ▼ End	Wash ▼ Main wash ▼ Rinse 1 ▼ Rinse 2 ▼ Final Rinse ▼ Dry ▼ End	
Duration (minutes)	10	30	80	110	130	