

Tonneau trim panels lh/rh - To remove and fit

Note:

The tonneau trim panels lh/rh are foam backed and bonded to the tonneau assembly.
The foam backing panel must also be renewed when replacing the outer trim panel.

Important:

Mark the position of the twin stitch line to the centre trim panel.

 [086311w0011](#)

Remove the centre trim panel tonneau. ([refer to bin: 0863](#))

Remove the tonneau brightware/blackware assembly. Refer to Brightware/blackware assembly - To remove and fit. ([refer to bin: 0853](#))

Completely fold the hood assembly into the stowage compartment.

Carefully separate the damaged trim panel from the tonneau cover assembly.

Installation:

Clean away any old adhesive residue from the tonneau cover with a suitable solvent cleaner.

Apply Fastbond 2000 to the mating faces of the foam backing panel. Refer to Consumables.

Fit the foam backing panel to the tonneau.

 [086311w0012](#)

Note:**Installation:**

Apply Fastbond 2000 to the mating faces of the foam backing panel and the trim panel. Refer to Consumables.

Important:

Carefully positioning the trim panel as to align the stitch line, bond the trim panel to the foam backing on the tonneau cover.

 [086311w0013](#)

Installation:

Trim the excess material from edges of the trim panel.

Important:

Ensure that all fold cuts are not visible when trim panel is folded under the tonneau substrate.

 [086311w0014](#)

Bond the trim panel to the underside of the tonneau assembly, trim off the excess material leaving the leather tab (A).

 [086311w0015](#)

Fit the centre trim panel to the tonneau cover.

Fit the tonneau brightware/blackware assembly.