


**! Attention:** Please read the operating manual prior to operating the machine for the first time.

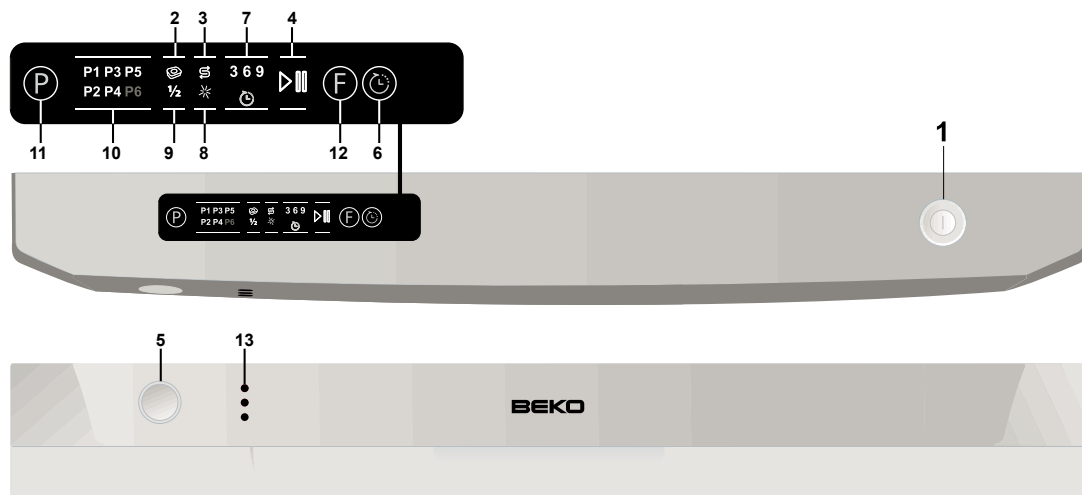

- 1 On / Off Key
- 2 Tablet Detergent Indicator
- 3 Salt Indicator
- 4 Start / Pause / Cancel Indicator
- 5 Start / Pause / Cancel Key
- 6 Time Delay Key
- 7 Time Delay Indicator
- 8 Rinse Aid indicator
- 9 Half Load Indicator
- 10 Programme Indicator
- 11 Programme Selection Key
- 12 **Function "F"** (Half Load / Tablet Detergent Key)
- 13 LED progress indicator lights

## Starting your machine

- Open the tap.
- Plug in to the socket.
- Open the door of the dishwasher.
- Place the dishes in accordance with the instructions in the user manual.
- Make sure that the upper and lower impellers rotate freely.
- Put sufficient amount of detergent in the detergent dispenser and close its lid.
- Make sure that indicators on programme display are illuminated by pressing On / Off key.
- Check if the Rinse Aid indicators light and add rinse aid if needed.
- You may use Half Load / Tablet Detergent Key and Time Delay key features as necessary.
- Refer to "Table of Programme Data and Average Consumption Values" to select a suitable programme.
- Select the desired programme with Programme Selection key.

- Press Start / Pause / Cancel key to start the programme.
- ⚠ Pay attention not to open the door of the machine when it is running. If you need to open the door, safety system will stop your machine. There may be a rush of vapour when you open the door of your machine; be careful. The programme will resume running when you close the door.
- Open the door of the dishwasher.
- Press On / Off key to turn off your machine.
- Indicator lights on the programme display will turn off.
- Close the tap.
- Unplug the machine from the socket.
- ⚠ Leave your dishes in the machine for about 15 minutes after they are washed in order to have them cooled down. Your dishes will dry in a shorter time if you leave the door of your machine ajar during this period. This will increase the drying effectiveness of your machine.


**Programme Table**

Programme number	1 Reference*	2	3	4	5	6
Programme name	Eco	Prewash	Mini 30	Delicate	Quick & Clean	Intensive
Cleaning temperature	45°C	-	35°C	40°C	60°C	70°C
Degree of Soiling	Most economical washing program for the normally soiled daily dishes that are kept waiting.	Suitable for removing the remnants on the soiled dishes that will be kept waiting in the machine for a few days, and thus, for preventing the bad odor buildup.	Suitable for lightly soiled daily dishes that are scraped or pre-cleaned.	Suitable for dishes that are not pre-cleaned but washed immediately.	Daily washing program at which heavily soiled dishes are cleaned in the fastest way.	Suitable for heavily soiled dishes, pots and pans.
	Normal	-	Light	Light	Heavy	Heavy
Detergents A=25 cm <sup>3</sup> /15 cm <sup>3</sup> B=5 cm <sup>3</sup>	A+B	-	A	A	A+B	A+B
Programme sequence (without options)	Pre-wash ▼ Wash ▼ Cold rinse ▼ Hot Rinse ▼ Dry ▼ End	Pre-wash ▼ End	Wash ▼ Cold rinse ▼ Hot Rinse ▼ End	Pre-wash ▼ Wash ▼ Cold rinse ▼ Hot Rinse ▼ Dry ▼ End	Wash ▼ Cold rinse ▼ Hot Rinse ▼ Dry ▼ End	Pre-wash ▼ Wash ▼ Cold rinse ▼ Hot Rinse ▼ Dry ▼ End
Duration (min)	124	14	30	71	58	115
Water (l)	15,4	4,2	11,8	13,2	11,8	17,5
Energy (kWh)	0,88	-	0,79	0,9	1,32	1,67

The consumption values shown in the table were determined under standard conditions. Differences may therefore occur under practical conditions.  
\* Reference programme for testing institutes according to AS/NZS 2007

**On / Off Key**

When you press On / Off key, indicator lights illuminate on the display for ON position. The lights turn off in OFF position.

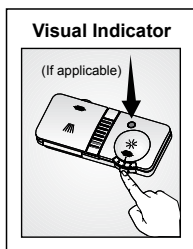

**Rinse aid level indicator light**

If this indicator light comes on, you have to refill rinse aid (If applicable).

You can also tell whether rinse aid must be refilled by looking at the rinse aid dispenser. When the visual fill indicator is dark, there is enough rinse aid in the dispenser.

When the colour is light, open the dispenser and refill rinse aid.

**Programme Selection Key**

Refer to "Table of Programme Data and Average Consumption Values" to select a programme suitable for your dishes. Select the desired programme with programme selection key.

**Function "F" (Half Load / Tablet Detergent) Key**

Half Load / Tablet Detergent Key allows you to turn on and off the Half Load and Tablet Detergent functions of your machine.

**Half Load Function**

If you want to run your machine without loading it completely, place your dishes into the machine as you desire. Press On / Off key to turn on your machine. Press the Half Load / Tablet Detergent key after selecting the desired programme until Half Load Indicator lights up, then press Start / Pause / Cancel key and close the door of your machine. With the Half Load option you can use every part of your lower and upper baskets and you can save from both water and power.

**Tablet Detergent Function**

Depending on the hardness level of the tap water, the Tablet Detergent function allows obtaining a better drying performance from the multi-purpose detergents such as 2in1, 3in1, 4in1, 5in1, etc., called as all-in-one detergents. Tablet Detergent Indicator lights when the Tablet Detergent function is selected. Salt and Rinse Aid indicators turn off when this function is activated.

Turn on your machine by pressing the On / Off key to use the Tablet Detergent function. Press the Half Load / Tablet Detergent key after selecting the desired programme until Half Load Indicator lights up, then press Start / Pause / Cancel key and close the door of your machine.

To use the Half Load and Tablet Detergent functions concurrently, turn on your machine by pressing the On / Off key and then press the Half Load / Tablet Detergent key until Half Load and Tablet Detergent Indicators illuminate together.

⚠ If you have used Half Load or Tablet Detergent features during the last programme you used, Half Load or Tablet Detergent function will remain active in the next washing programme you will select. If you do not want to use these functions in the new programme you have selected, press the Half Load / Tablet Detergent key until the indicator of the relevant function turns off.

**"Inner Illumination" Setting (If applicable)**

You can use the submenu settings to change the "Inner Illumination" setting you will use in your machine.

**To change the submenu settings:**

Turn on your machine by pressing the On/Off button while pressing and holding Programme Selection and Start/Pause/Cancel keys. Firstly, P1 indicator will light up on the display. Select the desired setting (P1, P3) by pressing the Programme Selection key.

**P1:** Inner illumination (ON)

**P3:** Inner illumination (OFF)

Save the selected setting by pressing Start/Pause/Cancel key again.

**Time Delay**

Using the Time Delay key, you may delay the starting time of your programme up to 3,6,9 hours with increments of 30 minutes. Press Start / Pause / Cancel key after setting the Time Delay and close

the door of your machine. Once the time delay is over, the selected programme will start automatically.

**Start / Pause / Cancel Key**

When you press the Start / Pause / Cancel key, the washing programme you have selected will start. (Start / Pause / Cancel indicator lights in Start mode, and turns off in Pause mode)

⚠ To press the Start / Pause / Cancel key, wait for two seconds after you turn on the machine by pressing the On / Off key.



**LED progress indicator lights**

The program sequence throughout the washing process can be monitored from the progress indicator lights on the control panel.

**! Warning**

Following the washing stage, in order to drain and remove water from inside the machine completely, the machine will pause for approximately 35 minutes. Do not worry this is not a fault. Then End progress indicator light will come on.

**! Warning**

Do not switch the machine off before End light comes on.

**Canceling a programme**

To cancel the program selection while the machine is operating open the door. ! Care must be taken when opening the door, as steam will escape. Press and hold Start / Pause / Cancel key for 3 seconds. Release the key as the Start / Pause / Cancel indicator starts flashing. Once you close the door of your machine, draining is completed in 2 minutes and the machine gives an audible warning when it is completed.

⚠ There might be residues of detergent or rinse aid left in the machine and / or on the pieces being washed depending on the step the programme you have cancelled was in.