


[Transmission Oil Checking](#)  
[Transmission Oil Level Changing](#)  
[Transmission Oil Adjusting Cruise Control Lever](#)

## **Service Mower**

[Removing Mower](#)  
[Installing Mower](#)  
[Adjusting Lift Assist Spring](#)  
[Replacing Mower Drive \(Primary\) Belt](#)  
[Replacing Mower Deck \(Secondary\) Belt](#)  
[Checking for Bent Mower Blades](#)  
[Servicing Mower Blades](#)  
[Sharpening Blades](#)  
[Balancing Blades](#)

### **Replacing Mower Deck (Secondary) Belt**

1. Park machine safely. (See Parking Safely in Safety section.)
2. Remove mower deck.

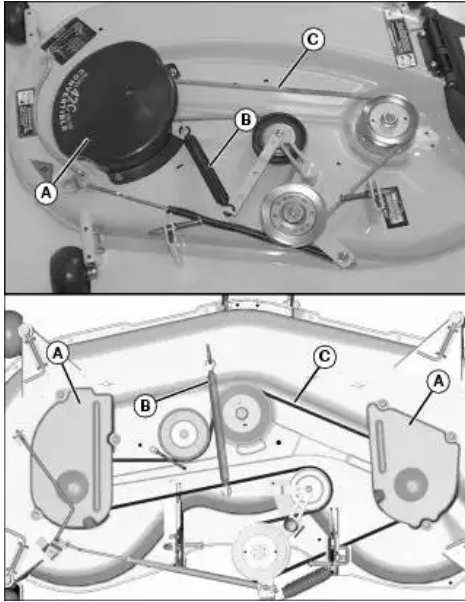

M97146 MX8378

Picture Note: 42C shown above, 48C and 54C shown below.

3. Remove belt shields (A).