


Replacing Fuse

1. Park machine safely. (See Parking Safely in the SAFETY section.)
2. Lift hood.

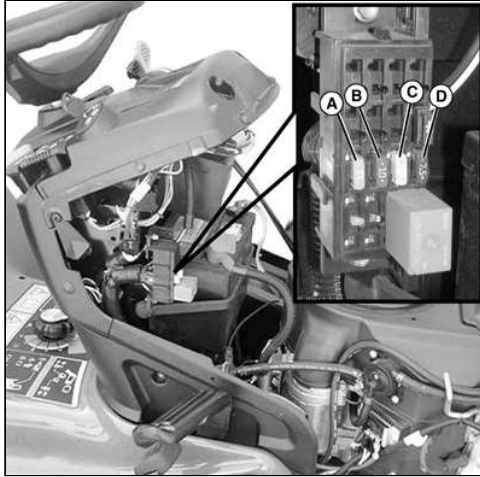

3. *MXAL46434-UN-05APR13*

Pull blown 15 amp fuse (A), 10 amp fuse (B), 20 amp fuse (C), or 7.5 amp fuse (D), out of socket.

- Fuse identification:

Position	Circuit	Fuse Size
A	Main Circuit	15 amp
B	12 Volt Power Port (Optional)	10 amp
C	Starter Circuit	20 amp
D	PTO Circuit	7.5 amp

4. Check metal strip in fuse window and discard fuse(s) if strip is broken.
5. Push new 15, 20, 10, or 7.5 amp fuse into correct socket.
6. Lower hood.

SP66632,00044CE-19-20130823

