


AR68.30-P-4600SX Remove Paneling In Trunk

- except CODE (Z07) Top protection [models 221]

Component Identification

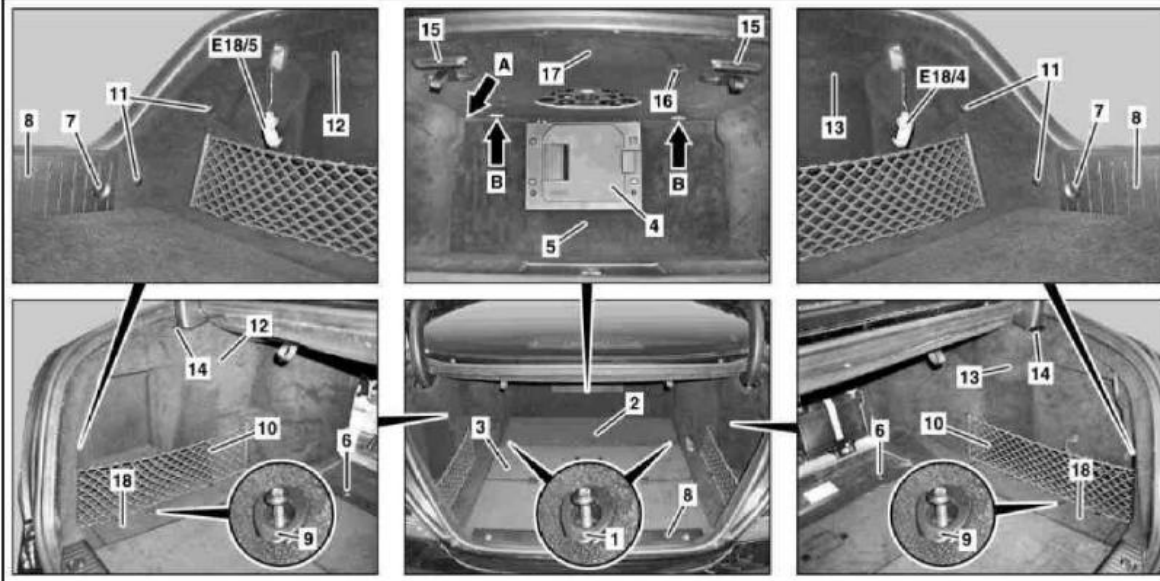

P68.30-3233-09






Shown on model 221

- | | | |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <p>1 Anchoring hook</p> <p>2 Lower front paneling (on model 221 without code (669) Spare tire on steel rim)</p> <p>3 Trunk floor paneling (on model 216 or model 221 with code (669) Spare tire on steel rim)</p> <p>4 Frame with flap (282) Skibag (through-loading feature) or code (308) Cooling compartment in center rear armrest)</p> <p>5 Center paneling</p> | <p>6 Clip (without code (669) Spare tire on steel rim)</p> <p>7 Clip</p> <p>8 Rear center section paneling</p> <p>9 Anchoring hook</p> <p>10 Luggage net</p> <p>11 Clips (on model 221)</p> <p>12 Left paneling</p> <p>13 Right trim piece</p> | <p>14 Hinge lever passage frame</p> <p>15 Pocket hook</p> <p>16 Clip</p> <p>17 Upper trim panel</p> <p>18 Longitudinal member paneling (only if installed if so equipped)</p> <p>E18/4 Right luggage compartment lamp</p> <p>E18/5 Left luggage compartment lamp</p> |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

[Open In New Tab](#)

[Zoom/Print](#)

Steps 1-9

|   | Remove/install | | |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--|
| 1 | Remove lashing eyes (1) | | |
| 2.1 | Remove refrigerator box in trunk | On vehicles with code (308) Refrigerator box in center rear backrest | |
| 3.1 | Remove lower front paneling (2) | On model 221 without code (669) Spare tire on steel rim | |
| 3.2 | Remove trunk floor paneling (3). | On model 221 with code (669) Spare tire on steel rim, model 216 | |
| 4.1 | Remove frame with flap (4) | With vehicles with code (282) Skibag (through-loading feature) or with code (308) Cooling compartment in center rear backrest | |
| 5 | Loosen center paneling (5) at passage (arrow A) from left to right and remove on left side toward rear. | <p> Carefully loosen center paneling (5) to prevent damaging center paneling (5).</p> <p> Observe electrical plug connector in area of center paneling (5) on vehicles with code (308) Cooling compartment in center rear armrest.</p> | |
| 6.1 | Remove clips (6) and remove paneling for spare tire well. | <p>On vehicles without code (669) Spare tire with steel rim</p> <p> On model 221 the lower front paneling (2) must be removed.</p> <p>On model 216 the trunk floor paneling (3)</p> | |

| | | | |
|-----|----------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------|---------------|
| | | must be removed. | |
| 7.1 | Remove luggage compartment floor paneling (3) from spare tire recess paneling | On model 221 without code (669) Spare tire on steel rim, when replacing spare tire well or trunk floor paneling (3). | |
| 8 | Remove clips (7) and unclip rear center section paneling (8) with mounting wedge. | i The rear center section paneling (8) can be removed separately. S | *110589035900 |
| 9 | Remove right luggage compartment lamp (E18/4) or left luggage compartment lamp (E18/5) | | |

[Open In New Tab](#)

[Zoom/Print](#)


Steps 10-18

| | | | |
|------|-------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--|
| 10 | Remove lashing eyes (9) | | |
| 11.1 | Loosen luggage net (10) on left or right longitudinal member paneling (18) and unclip longitudinal member paneling (18) | Only if longitudinal member paneling (18) is installed if so equipped. i The longitudinal member paneling (18) can be removed separately. | |
| 12.1 | Remove clips (11) from left paneling (12) or right paneling (13). | With model 221 | |
| 13.1 | Remove left and right hinge lever passage frame (14). | With model 216 i Installation: Install hinge lever passage frame (14) with upper paneling (17) installed. | |
| 14 | Remove left paneling (12) or right paneling (13). | | |
| 15 | Remove pocket hooks (15). | i The bag hooks (15) can be removed separately. The number of bag hooks (15) depends on vehicle model. | |
| 16 | Remove clips (16) | i The number of clips (16) depends on vehicle model. | |
| 17 | Remove upper paneling (17). | i The upper paneling (17) can be removed with the left paneling (12) and the right paneling (13) installed. On model 216 the upper paneling (17) is additionally hooked into clips in the center area of the trunk lid seal. i Installation: Hook upper paneling (17) into lugs (arrows B) and position left paneling (12) or right paneling (13). | |
| 18 | Install in the reverse order | | |

[Open In New Tab](#)

[Zoom/Print](#)

Special Tool

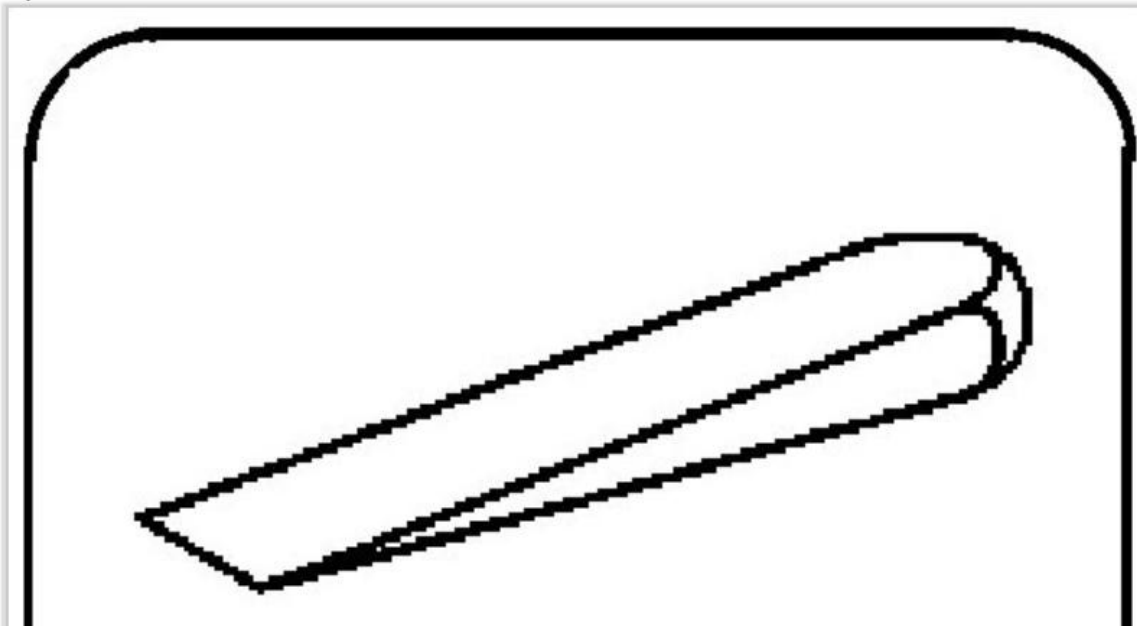

110 589 03 59 00

.....