


175D2750G377

175D2750G377

175D2750G377

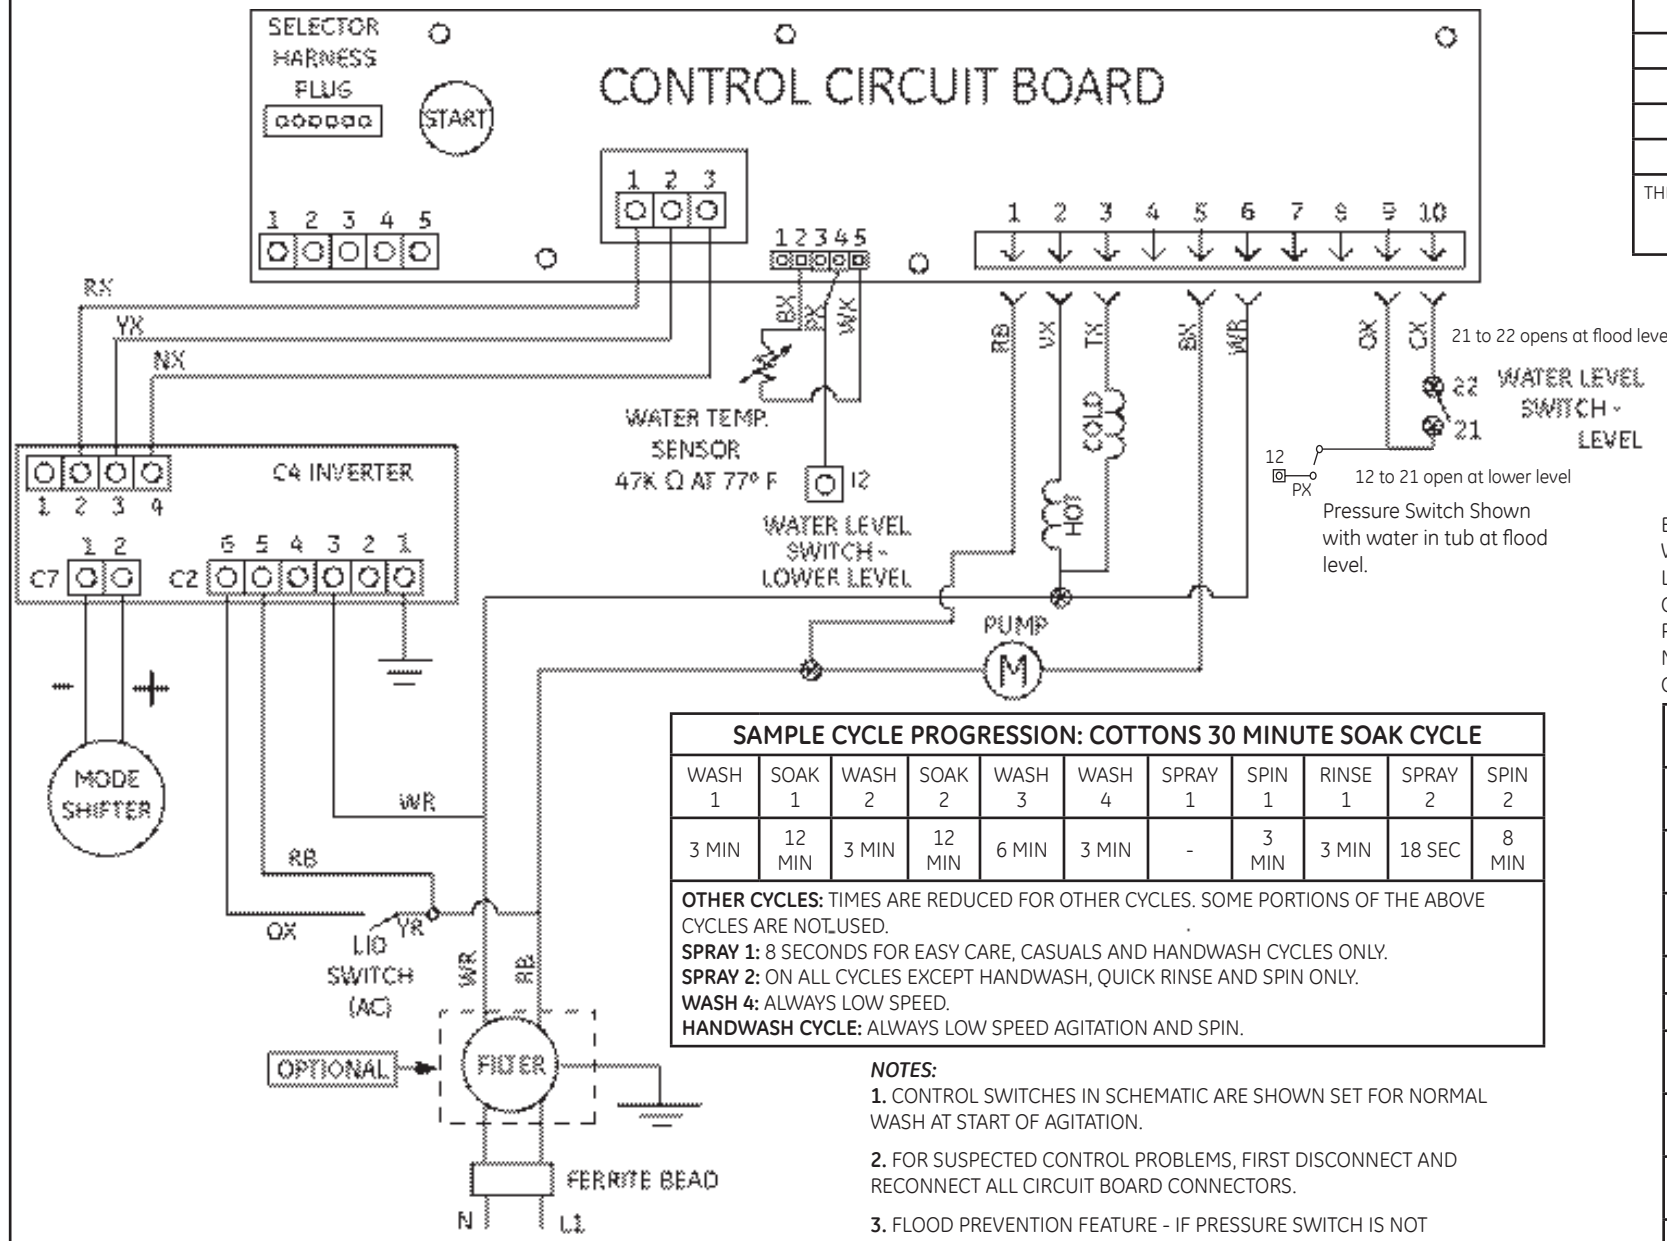

SAMPLE CYCLE PROGRESSION: COTTONS 30 MINUTE SOAK CYCLE

WASH 1	SOAK 1	WASH 2	SOAK 2	WASH 3	WASH 4	SPRAY 1	SPIN 1	RINSE 1	SPRAY 2	SPIN 2
3 MIN	12 MIN	3 MIN	12 MIN	6 MIN	3 MIN	-	3 MIN	3 MIN	18 SEC	8 MIN

OTHER CYCLES: TIMES ARE REDUCED FOR OTHER CYCLES. SOME PORTIONS OF THE ABOVE CYCLES ARE NOT USED.
SPRAY 1: 8 SECONDS FOR EASY CARE, CASUALS AND HANDWASH CYCLES ONLY.
SPRAY 2: ON ALL CYCLES EXCEPT HANDWASH, QUICK RINSE AND SPIN ONLY.
WASH 4: ALWAYS LOW SPEED.
HANDWASH CYCLE: ALWAYS LOW SPEED AGITATION AND SPIN.

- NOTES:**
- CONTROL SWITCHES IN SCHEMATIC ARE SHOWN SET FOR NORMAL WASH AT START OF AGITATION.
 - FOR SUSPECTED CONTROL PROBLEMS, FIRST DISCONNECT AND RECONNECT ALL CIRCUIT BOARD CONNECTORS.
 - FLOOD PREVENTION FEATURE - IF PRESSURE SWITCH IS NOT SATISFIED AFTER 40 MINUTES, WASHER WILL GO INTO PAUSE MODE AND FILL LIGHT WILL BLINK.

COLOR CODE

LETTERS	COLOR	LETTERS	COLOR
AX	LT. BLUE	RX	RED
BX	BLACK	SX	GRAY
CX	BROWN	TX	TAN
NX	DK. BLUE	VX	PURPLE
OX	ORANGE	WX	WHITE
PX	PINK	YX	YELLOW

THE "X" INDICATES ONE SOLID COLOR - NO TRACER. WIRES WITH TRACER SHOW BOTH COLORS. EXAMPLE - WR IS WHITE WITH RED TRACER.

WATER LEVEL SWITCH
 BEFORE DISCONNECTING HOSE FROM WATER LEVEL SWITCH. BE SURE WATER LEVEL IN MACHINE IS BELOW BOTTOM OF BASKET. AFTER RECONNECTING HOSE, PUT MACHINE IN SPIN FOR AT LEAST 1 MINUTE BEFORE CHECKING OPERATION OF SWITCH.

MOTOR INVERTER BOARD STATUS INDICATOR LIGHTS CODE

NUMBER OF FLASHES	DESCRIPTION	ACTION
1 SECOND ON 1 SECOND OFF	NORMAL STANDBY	NORMAL STANDBY
.5 SECOND ON .5 SECOND OFF	NORMAL RUNNING	NORMAL RUNNING
1 FLASH	LONG STOP TIME	REPLACE MOTOR
2 FLASH	SLIPPING BELT	* CHECK BELT
3 FLASH	CORRUPTED SOFTWARE	REPLACE MOTOR
4 FLASH	MODE SHIFT CIRCUIT FAILED	* CHECK MODE SHIFTER COIL
5 FLASH	NOT IMPLEMENTED	REPLACE MOTOR
6 FLASH	LOCKED ROTOR	* MAKE SURE SYSTEM IS FREE
7 FLASH	LID SWITCH DID NOT OPEN	* CHECK LID SWITCH
8 FLASH	MOTOR OVERHEATED	* MAKE SURE SYSTEM IS FREE
9 FLASH	BRAKE RESISTOR OPEN	REPLACE MOTOR
10 FLASH	COMMUNICATION ERROR	* CHECK BACKSPASH CONTROL

* ON 2,4,6,7,8 & 10 FLASH ERRORS IF NO SYSTEM FAILURES ARE FOUND, REPLACE MOTOR

FIELD SERVICE MODE
 POSITION CYCLE SELECTOR AT 9 O'CLOCK. DEPRESS START BUTTON WHILE ROTATING CYCLE SELECTOR KNOB 180 DEGREES. RELEASE START BUTTON AND ALL LEDS WILL LIGHT. THIS IS POSITION ZERO.
 LED NUMBER IS POSITION LOCATION FROM LEFT TO RIGHT FOR 5 LED MODELS. 2 DIGIT DISPLAY MODELS HAVE LED 1,2 & 3 AND ARE NUMBERED TOP TO BOTTOM. PRESSURE SWITCH STATUS IS INDICATED ON LED 3 FOR 2 DIGIT DISPLAY MODELS. ROTATE KNOB CLOCKWISE TO VARIOUS POSITIONS (DETENTS) PER THE TABLE TO PERFORM FUNCTIONAL CHECKS.
 FOR EXAMPLE, IN POSITION #2, IF LED 3 (RINSE LED) IS ON. THEN EEPROM IS NOT FUNCTIONING CORRECTLY.
 TERMINATION OF SERVICE MODE CAN BE ACCOMPLISHED BY REMOVING POWER TO THE WASHER, OR DEPRESSING START BUTTON AND ROTATING KNOB 180°, OR WAITING 30 MINUTES.
 TO DELETE ERROR CODES, PRESS THE START BUTTON WHILE IN ERROR CODE DETENT (KNOB POSITION 2, 3 OR 4).

LED POSITION	DISPLAY	KNOB POSITION				FUNCTION
		0	1	2	3	
0 - INITIAL	88	1	1	1	1	LED CHECK
1	*	*	*	*	*	MODEL CODE
2				1		ERROR CODE - EEPROM
2			1			ERROR CODE - THERMISTOR
2			1			ERROR CODE - SLOW PUMP
3				1		ERROR CODE - NO FILL
3			1			ERROR CODE - NO PUMP
3			1			ERROR CODE - PUSH BUTTON
4				1		ERROR CODE - FLOW METER
4			1			ERROR CODE - PRESSURE SWITCH
5	H			1	2	HOT WATER VALVE ACTIVE
6	C		1		2	COLD WATER VALVE ACTIVE
7	AL	1			2	# SLOW AGITATE (DRY)
8	AH	1			2	# FAST AGITATE (DRY)
9	P		1		2	PUMP
10	S			1	2	SPIN
11	3P				2	3 Ft PUMP TIME
11	8P	1	1	1	2	8 Ft PUMP TIME

* L DEPENDENT
 1 L ON
 # DEPRESS START BUTTON WILL CHANGE DRY TO WET
 2 LED ON IF TUB FULL (PRESSRE SWITCH SATISFIED)

⚠ WARNING: TO REDUCE THE RISK OF ELECTRICAL SHOCK:
 THE POWER MUST BE DISCONNECTED BEFORE SERVICING BY UNPLUGGING THE MACHINE OR DISCONNECTING THE CIRCUIT BREAKER.
 THE MACHINE MUST BE ELECTRICALLY GROUNDED THROUGH THE GROUNDING LEAD IN THE 3-PRONG POWER CORD. THE CORD MUST BE PLUGGED INTO A PROPERLY INSTALLED AND GROUNDED APPLIANCE OUTLET. IF LOCAL CODES REQUIRE AN ADDITIONAL GROUND CONNECTION, USE A 18 GAUGE OR LARGER WIRE TO CONNECT THE WASHER CABINET TO AN ESTABLISHED GROUND. IN ALL CASES, THE GROUNDING METHOD MUST COMPLY WITH ALL LOCAL ELECTRICAL CODES AND ORDINANCES.

⚠ WARNING: TO SERVICE THIS MACHINE, POWER MUST BE DISCONNECTED.



PUB NO. 31-16628-3

WARNING TO REDUCE THE RISK OF ELECTRICAL SHOCK:

- The power must be disconnected before servicing by unplugging the machine or disconnecting the circuit breaker.
- The machine must be electrically grounded through the grounding lead in the three-prong power cord. The cord must be plugged into a properly installed and grounded appliance outlet. If local codes require an additional ground connection, use a 16-gauge or larger wire to connect the washer cabinet to an established ground. In all cases the grounding method must comply with all local codes and ordinances.

IMPORTANT - RECONNECT ALL GROUNDED DEVICES

IF GROUNDING WIRES, SCREWS, STRAPS, CLIPS, NUTS OR WASHERS USED TO COMPLETE A PATH TO GROUND ARE REMOVED FOR SERVICE, THEY MUST BE RETURNED TO THEIR ORIGINAL POSITION AND PROPERLY FASTENED.

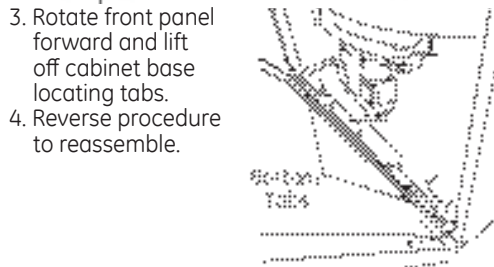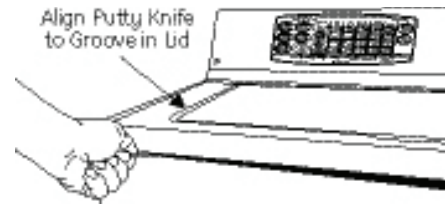

3. Rotate front panel forward and lift off cabinet base locating tabs.
4. Reverse procedure to reassemble.

WATER LEVEL SWITCH

BEFORE DISCONNECTING HOSE FROM WATER LEVEL SWITCH, BE SURE WATER LEVEL IN MACHINE IS BELOW BOTTOM OF WASH BASKET. AFTER RECONNECTING HOSE, PUT MACHINE IN SPIN FOR AT LEAST ONE MINUTE BEFORE CHECKING OPERATION OF SWITCH.


1 To Remove Control Panel:

1. Remove 4 screws along top of control panel.

2 To Remove Load Size Switch from Control Panel:

Note: For models where load-size switch is not mounted on control panel, see Step 5.2.

1. Follow step 1.
2. Using screwdriver, gently depress tab and turn load-size switch counterclockwise to remove from keyhole.
3. Reverse procedure to reinstall.

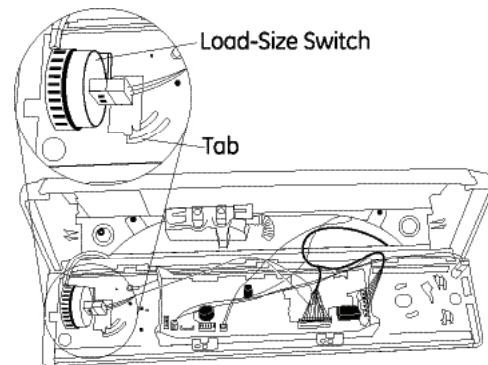

3 To Remove Front Panel:

1. Locate two spring clips between cover and front panel, by aligning putty knife with groove on either side of lid and cover. (See illustration.)
2. Insert putty knife and push forward to release clips.

Align Putty Knife to Groove in Lid


3. Rotate front panel forward and lift off cabinet base locating tabs.
4. Reverse procedure to reassemble.

4 To Remove Cover/Lid Assembly:

1. Remove front panel using step 3.
2. Remove two 1/4" hex screws on front of cabinet.
3. Reach under the lid assembly and locate lid switch. Squeeze lid switch latch in to release while gently pushing it upward. Guide through lid switch opening.
4. Remove cover/lid assembly.
5. Reverse procedure to reassemble.

5 To Remove Spin Basket:

1. Follow steps 3 and 4.
2. Remove five hex screws from control panel bracket. Tilt bracket up and out of the way. Note that the water valve and fill nozzle are attached to the control panel bracket as well. On some models, the load-size switch is attached to the control panel bracket. If this switch needs to be removed, tilt control panel bracket up and squeeze load-size switch mounting snap with pliers from underside to remove.

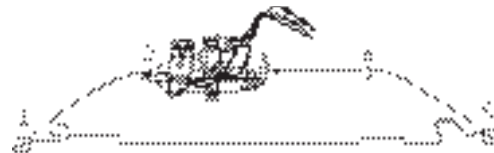

3. Note dampening strap orientation for correct re-assembly. Disconnect four dampening straps from tub attached by 5/16" hex screws.
4. Remove tub cover by lifting out eight molded tabs on tub cover, and pull cover off.
5. Lift the dispenser top tab and turn the top counterclockwise using the 2 turning tabs shown. Lift the dispenser out of the pulsator.





6. Remove 7/16" hex bolt attaching pulsator to spline shaft.
7. Remove pulsator by lifting it straight up and off the shaft.
8. Remove left-handed 1-11/16" hub nut. This nut is aluminum; take care not to round the edges when removing or replacing.

TIP: The word "LOOSEN" with an arrow APPEARS ON THE NUT.



TIP: To align agitator to replace, match grooves in air bell to grooves inside agitator. Fin is aligned with groove.

6 To Service Tub/Motor Assembly:

1. Repeat steps 3, 4 and 5.
2. Remove split ring and washer from shaft assembly.
3. Remove front rod and spring assembly (one at a time) by lifting motor tub assembly up to take weight off suspension spring at lower portion of rod. Pull the spring assembly out of the leg and platform assembly, and repeat for rear rod and spring assemblies. Allow them to hang freely. The front and rear rod and spring assemblies have different-color spring housings and should not be switched.

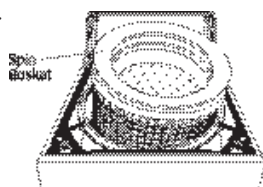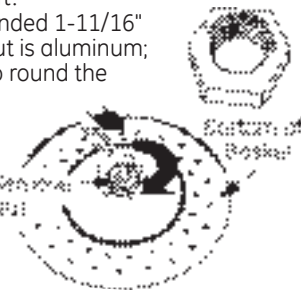

4. The motor and tub assembly will now lean forward after both front rod and spring assemblies are unhooked at platform.
5. Disconnect motor harness connector, grounding wire to frame and pressure switch hose at takeoff.
6. Disconnect drain hose inlet (black hose) at tub.
7. Lift and push bottom of tub/motor assembly towards the rear of the cabinet, and roll tub out under top lip of cabinet.
8. Pull tub out of cabinet by lifting it over on its top as shown below.
9. Reverse procedure to reassemble.

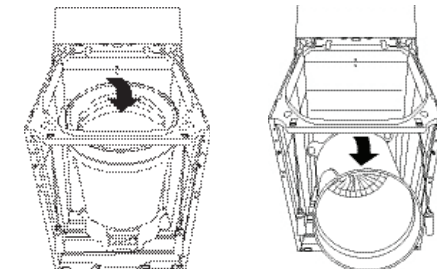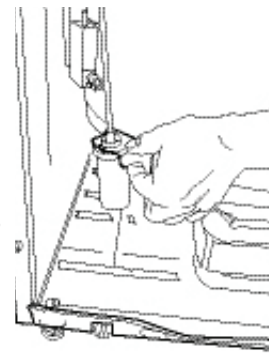

7 To Check Motor Status:

1. Repeat step 3.
2. Count number of times the light under the motor's metal drip shield flashes.
3. Refer to Flash Codes on reverse side of this manual.



8 Motor Removal/Reinstallation:

1. Repeat step 3.
2. Remove belt by pushing down on belt near motor pulley while turning large pulley.
3. Loosen four 3/8" hex nuts enough to be able to pull the motor up and forward so the rear motor nuts clear the large pulley.
4. Remove the four motor bolts.
5. Disconnect wire harness.
6. Tilt top of motor away from you and pull out.




To Reinstall Motor:

1. Set motor back on platform, with motor pulled all the way forward so locator pin is NOT seated in platform.
2. Hand-start the four motor nuts.
3. Push motor back so motor alignment pin drops into platform.
4. Tighten motor nuts.
5. Reconnect wire harness.
6. Apply belt tool (WX05X10102) to motor pulley.
7. Attach belt to large pulley using zip tie.
8. With belt looped on drive pulley, rotate large pulley until the belt slack is taken up.
9. Rotate pulley until belt is seated in motor grooves.
10. Remove belt tool and carefully cut off zip tie.
11. Put machine in spin for 60 seconds and then lift the lid. Ensure machine brakes to a complete stop under 7 seconds. If not, check lid switch and repeat brake check. **Brake function must be working.**

TIP: MUST BE SURE BELT IS FULLY SEATED IN MOTOR PULLEY GROOVES.

9 To Service Shaft Assembly:





1. Repeat steps 3, 4, 5, 6.
2. Remove belt by pushing up on belt near motor pulley while turning.

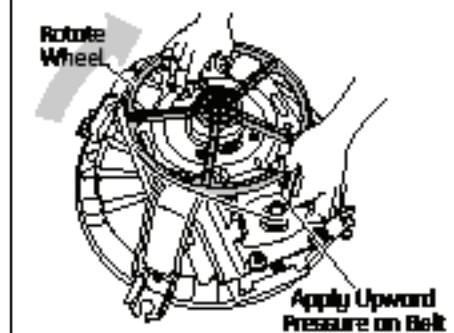

3. Remove large pulley by holding pulley with one hand and removing 3/4" nut.



4. After pulley is removed, remove four 3/8" hex bolts (3 on top and 1 on bottom) mounting the shaft assembly to the platform.

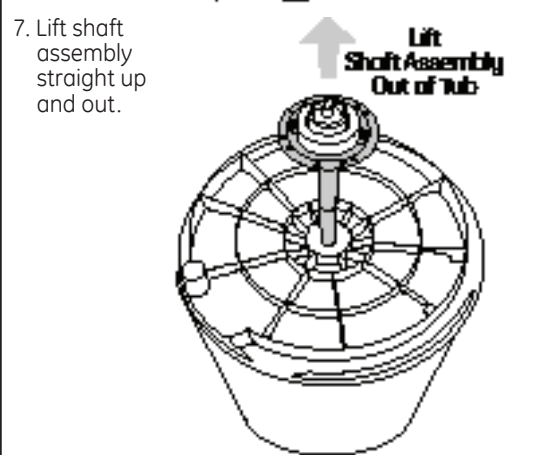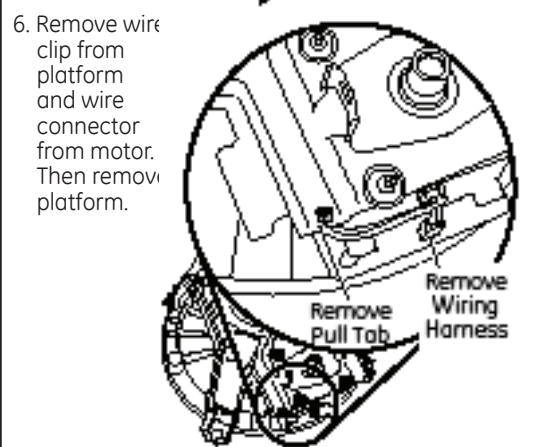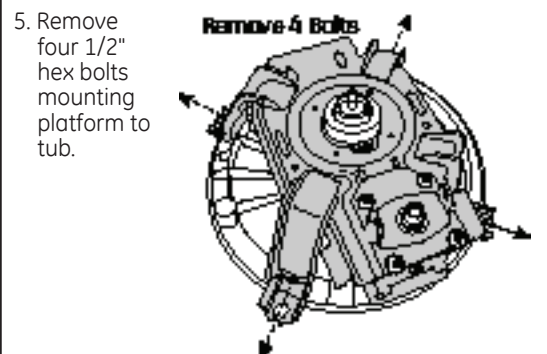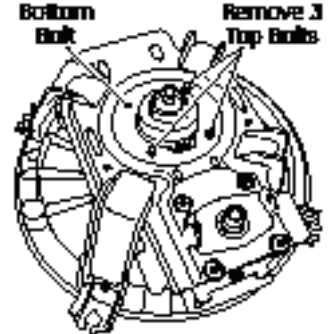

8. Reverse steps 7-3 to reinstall shaft assembly and platform. It is critical to exceed 420 in-lbs when re-installing the pulley nut removed in step 3. Follow steps 6-11 under To Reinstall Motor to install belt.

TIP: Take care to align the two locating holes from shaft assembly to platform before reinstalling shaft assembly.

TIP: Take care not to get dirt/oil on pulley and shaft interface. If some present, wipe off with clean cloth.